



Flash memory card

Removable memory device

Inserted and removed from a slot in a computer or mobile device

Usually found with pdas, camcorders, and cameras

If you don't have a card slot you will have to purchase an external card reader/ writer